C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 1

⚠ IMPORTANT SAFETY INFORMATION

This information is provided in the interest of safety. You must read it carefully before installing or using the appliance.

Installation

- Any electrical work required to install the appliance must be carried out by a competent qualified person.
- Do not use a two-way adaptor or extension lead. The dryer must be connected to its own socket.
- Ensure the appliance does not stand on the electrical supply cable.
- It is dangerous to alter the specifications or modify this product in any way.

Child Safety

- Check your drum before use. Pets and children have been known to climb into tumble dryers.
- This appliance should be operated by adults. Do not allow children to tamper with the controls or play with the product.
- Keep children away from the appliance when it is in operation.

During Use

- This tumble dryer is intended for normal domestic use only.
- Clean the lint filter after each drying cycle.
- The appliance should be unplugged after use.
- Do not block the air inlets at the front and back of your dryer.
- Do not allow fluff to accumulate around the tumble dryer.
- Do not overload the appliance.

- Do not exceed the recommended maximum load.
- Clothes which are dripping wet must not be placed in the dryer. Only load well spun clothes.
- Do not dry items containing foam rubber or rubber like materials.
- Under no circumstances should anything other than articles recommended for tumble drying be placed in the tumble dryer.
- Do not dry items that have been in contact with flammable chemicals such as dry cleaning fluid.
- Never switch the tumble dryer off and leave a hot load in the drum.

Service

- Do not attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction.
- Repairs should be carried out by Tricity Bendix Service Force.

Please read this instruction book before using the appliance, and retain for future reference

ELECTRICAL CONNECTION

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.


WARNING - THIS APPLIANCE MUST BE EARTHED

Before switching on make sure the electricity supply voltage is the same as that indicated on the appliance rating plate. The rating plate is located on the back panel of your tumble dryer.

CHANGING A FUSE

Your tumble dryer will be fitted with one of two plugs. When replacing the fuse, always use ASTA approved 13A fuses to British Standard 1362.

Type 1: Prise out the fuse cover (A) with fuse (B). Change the fuse and refit both to the plug.

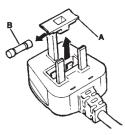

Important - The fuse cover must be refitted when changing a fuse. If the fuse cover is lost, the plug should not be used until a correct replacement is fitted. Replacements are identified by the colour insert or the colour embossed in words on the base of the plug. They are available from most electrical retail shops.

Type 2: Prise up the hinged fuse cover (A) as


Replace the fuse and press the cover back into place.



FITTING A REPLACEMENT PLUG

Should the plug need to be replaced for any reason the wires in the mains lead are coloured in accordance with the following code:

> Blue - Neutral 'N' Brown - Live 'L' Green and Yellow - Earth 'E'

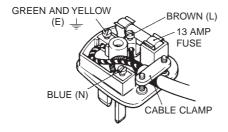

The GREEN & YELLOW wire must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol = or coloured green or green and yellow.

The BLUE wire must be connected to the terminal marked with the letter 'N' or coloured black.


The BROWN wire must be connected to the terminal that is marked with the letter 'L' or coloured red.



14

A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

DESCRIPTION OF THE APPLIANCE

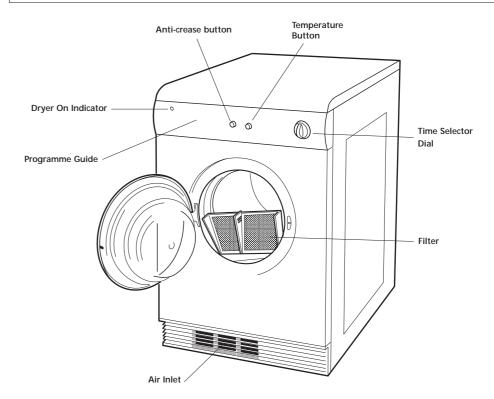

Temperature Button

Depress the button for the high temperature. Press the button again to release it for the low temperature.

Use the high temperature for drying cottons and linens, and the low temperature for drying synthetics and delicates.

Time Selector Dial

The time selector dial is marked in minutes up to a maximum of 140 minutes.

To select a drying time, turn the dial clockwise until the time you require is in line with the marker.

To reduce the drying time turn the dial clockwise past the OFF position until the correct time is reached.

DO NOT ATTEMPT TO TURN THE DIAL ANTI-CLOCKWISE.

Programme Guide

This is a guide to help you select the correct temperature and drying time.

Filter

This must be removed and cleaned after every drying cycle.

Anti-crease Button

This function allows the clothes to be tumbled intermittently at the end of a programme to reduce creasing. If selected, this will continue until the appliance is switched off.

Dryer On Indicator

This illuminates when the appliance is operating. This will extinguish when the appliance is switched

Air Inlet

3

Do not cover or block the air inlet.

PROGRAMME GUIDE

Cotton and Polyester Cotton

	Degree of Spin Given	Quantity	Selector Dial Setting
Store	500rpm 800/1000rpm 2800 rpm (spin dryer)	6.0kg	140 mins 110 mins 80 mins
Dry	500rpm 800/1000rpm 2800 rpm (spin dryer)	2.0kg	100 mins 80 mins 60 mins
Iron	500rpm 800/1000rpm 2800 rpm (spin dryer)	6.0kg	100 mins 80 mins 60 mins
Dry	500rpm 800/1000rpm 2800 rpm (spin dryer)	2.0kg	80 mins 60 mins 40 mins

Synthetics

	Degree of Spin Given	Quantity	Selector Dial Setting
Store	500rpm 800/1000rpm 2800 rpm (spin dryer)	2.0kg	60 mins 50 mins 40 mins
Dry	500rpm 800/1000rpm 2800 rpm (spin dryer)	1.0kg	40 mins 30 mins 20 mins

If the laundry is spin-dried in a washing machine at less than 500 rpm, the residual dampness will be higher and consequently the drying time should be increased.

This applies particularly to laundry consisting primarily of towels.

If the laundry is spin-dried at more than 1200 rpm, the residual dampness will be lower and consequently the drying time should be decreased.

INSTALLATION INSTRUCTIONS

Technical Information

Dimensions:

Height 85 cm
Width 59.5 cm
Depth 58 cm

Maximum Dry Weight Loads:

Cotton 6 kg
'Easycare' polyester/cotton 6 kg
(for minimum creasing) 2 kg
Delicates 2 kg

Electrical Ratings

Voltage 220-240v Frequency 50Hz Power rating 2700w

POSITIONING

Site Preparation

- The installation surface must be clean and dry.
- Do not install on a deep pile carpet.
- Do not install the appliance where the temperature may fall below freezing or rise above 35°C.
- Do not use a two way electrical adaptor or extension lead. The dryer must be connected to its own socket.
- Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.
- Hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The flooring on which the tumble dryer is installed must therefore be heat resistant to a minimum of 60°C.



The plug must be accessible *after* installation.

Venting - This appliance contains a retractable vent hose which must be extended to an open door or window during use.

GUARANTEE CONDITIONS

Standard guarantee conditions

We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours in which case a **premium** will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the European Community (EC) or European Free Trade Area

- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements
- Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products
- This guarantee relates to you and cannot be transferred to another user
- Your new home is within the European Community (EC) or European Free Trade Area
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 28 28
Germany	Nurenberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Slough	+44 (0)1753 219898
Eire	Dublin	+353 (0) 14090770

HINTS & TIPS ON DRYING

Before placing articles of laundry in your tumble dryer, check the care labels to ensure they are recommended for tumble drying

Care labels you may find on your laundry

Suitable for tumble drying
Tumble dry using full heat
Tumble dry using half heat
Do not tumble dry

Λ

Do not overload the appliance

Here is a list of the approximate weight of some common laundry items:

Sheet	700 to 1000g
Pillowcase	100 to 200g
Tablecloth	400 to 500g
Table Napkin	50 to 100g
Kitchen Towel	70 to 120g
Linen Hand Towel	100 to 150g
Hand Towel	150 to 250g
Bath Towel	700 to 1000g
Bathrobe	1000 to 1500g
Shirt	200 to 300g
Apron	150 to 200g

- Always load well spun laundry. The higher the spin speed the lower the electricity consumption and the shorter the drying time.
- DO NOT load dripping wet laundry into the dryer. Roll the article in a towel or spin to remove excess water.
- Close poppers and zips and fasten any buttons.
- Sort the laundry. Separate synthetics from cottons/linens, and dry separately.
- Remove the laundry immediately after the programme has finished or select the Anticrease option.
- Use a fabric conditioning sheet to reduce static. We recommend the sheet is pinned to an article of laundry (using a safety pin).
- Mix the load i.e. large and small articles.
- When drying items such as sheets, we recommend you periodically stop the dryer to redistribute the load.

DO NOT use the tumble dryer to dry the following:

- Articles contaminated with inflammable substances e.g. petrol, cleaning solvents, cooking oil, fats or hair lacquer.
- Woollen and synthetic wool mixtures unless the item is labelled as suitable for tumble drying.
- · Very delicate articles such as silk
- Very large and bulky items such as duvets or sleeping bags.

OPERATING SEQUENCE

1. Loading the laundry

- Open the door by pulling it outwards
- Load the items one at a time, shaking them out loosely.
- Where possible mix the load, i.e. large and small items.
- Close the door.
- Dry your hands and plug in the appliance.



2. Selecting the programme

- Select the temperature
- Select the required drying time
- **i** Use the programme guide to help you select the correct drying time and temperature.
- The machine will now start working. It will rotate in a clockwise direction, and will periodically rotate anti-clockwise for approximately 20 seconds, which helps to prevent tangling.
 - To shorten a timed programme, turn the time selector dial clockwise past the off position until the correct time is reached, bearing in mind that during the last 12 minutes the dryer carries out the cooling phase.



3. When drying is complete

- The machine stops automatically
- Remove the laundry
- Switch off the machine
- i

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing.

Never switch the dryer off and leave a hot load in the drum.

The filter must be cleaned after every drying programme.

We recommend the machine is disconnected from the electricity supply when not in use.



Tricity Bendix Service Force



To contact your local Tricity Bendix Service Centre telephone 08705 929 929

CHA	NNEL ISLANDS	(M65)	7 King Street Kirkwall	GATESHEAD	Unit 356a
GUERNSEY	Guernsey Electricity PO Box 4		Orkney KW15	(M39)	Dukesway Court Dukesway
	Vale, Guernsey Channel Islands	PERTH	Hydro Electrical Inveralmond House		Team Valley Gateshead NE11 0BH
JERSEY	Jersey Electricity		Ruthervenfield Road Perth PH1 3AQ	GRIMSBY	15 Hainton Avenue
	Company PO Box 45	PERTH	Graham Begg	(M42)	Grimsby South Humberside
	Queens Road St Helier	(OWN SALES)	Unit 4 Airport Ind. Estate		DN32 9AS
	Jersey		Wick KW1 4QS	HULL	Unit 1
	Channel Islands JE4 8NY	SHETLAND	Tait Electronic Systems	(M41)	Boulevard Industrial Estate
8	SCOTLAND	(OWN SALES)	Ltd Holmsgarth Road		Hull HU3 4AY
ABERDEEN	54 Claremont Street	(**************************************	Lerwick Shetland ZE1 0PW	LEEDS (M37)	64-66 Cross Gates Road Leeds
(M05)	Aberdeen AB10 6RA	OUETI AND		(10137)	LS15 7NN
AUCHTERMUCHY (M03)	33a Burnside Auchtermuchy	(OWN SALES)	Bolts Shetland Ltd 26 North Road	NEWTON AYCLIFFE	Unit 16
(IVIU3)	Fife KY14 7AJ		Lerwick Shetland ZE1 0PE	(M45)	Gurney Way Aycliffe Ind Estate
BLANTYRE	Unit 5	WHALSAY	Leask Electrical		Newton Aycliffe DL5 6UJ
(M07)	Block 2 Auchenraith Ind. Estate	(OWN SALES)	Harisdale		
	Rosendale Way		Symbister, Whalsay Shetland ZE2 9AA	SHEFFIELD (M38)	Pennine House Roman Ridge Ind.
	Blantyre G72 0NJ			` ′	Roman Ridge Road Sheffield
DUMFRIES (M01)	93 Irish Street Dumfries	NORTH	IERN IRELAND		S9 1GB
(Scotland DG1 2PQ	BELFAST	Owenmore House	- NO	RTH WEST
DUNOON	Brair Hill	(M27)	Kilwee Business Park Upper Dunmury Lane		
(M67)	7 Hill Street, Dunoon		Belfast BT17 0HD	BIRKENHEAD (M11)	1 Kelvin Park Dock Road
	Argyll PA23 7AL		DITT OILD		Birkenhead L41 1LT
GLASGOW	20 Cunningham Road Clyde Estate		WALES	CARLISLE	Unit 7
(M04)	Rutherglen,	CARDIFF	Guardian Industrial Estate	(M10)	James Street Workshops
	Glasgow G73 1PP	(M28)	Clydesmuir Road Tremorfa, Cardiff		James Street Carlisle Cumbria CA2
INVERNESS (M06)	Unit 3B Smithton Indust. Est.		CF2 2QS		5AH
()	Smithton Inverness IV1 AJ	CLYWD (M14)	Unit 6-7 Coed - Parc Abergele Road	ISLE OF MAN (M64)	South Quay Ind. Estate Douglas
101 5 05 400 411		(10114)	Rhuddlan	(10104)	Isle of Man IM1 5AT
ISLE OF ARRAN (OWN SALES)	Arran Domestics Unit 4 The Douglas Centre		Clwyd Wales	LIVERPOOL	Unit 1
	Brodick Isle of Arran KA27 8AJ		LL18 5UG	(M15)	Honeys Green Precinct Honeys Green Lane
ISLE OF BARRA	J Zerfah	DYFED (M77)	Maes Y Coed High Mead		Liverpool L12 9JH
(OWN SALES)	244 Bruernish	(10177)	Llanybydder	MANIOUEOTED	
	Isle of Barra Western Islands HS9 5QY		Carmarthenshire SA40 9UL	MANCHESTER (M09)	Unit B Central Industrial Estate
ISLE OF BUTE	Walker Engineering	HAVERFORDWEST	Cromlech Lodge		St Marks Street Bolton BL3 6NR
	Glenmhor Upper Serpentine Road	(M75)	Ambleston Haverfordwest	PRESTON	Unit 250
	Rothesay Isle of Bute PA20 9EH		Pembrokeshire SA62 5DS	(M13)	Dawson Place
					Walton Summit Bamber Bridge
ISLE OF LEWIS	ND Macleod 16 James Street	OSWESTRY (M17)	Plas Ffynnon Warehouse		Preston Lancashire PR5 8AL
	Stornoway Isle of Lewis PA87 2QW	, ,	Middleton Road Oswestry	STOCKPORT	Unit 20 Haigh Park
1/51.00			SY11 2PP	(M16)	Haigh Avenue
KELSO (M08)	2-8 Wood Market Kelso				Stockport SK4 1QR
ORKNEY	Borders TD5 7AX Corsie Domestics	NC NC	ORTH EAST		
			-		



Tricity Bendix Service Force



To contact your local Tricity Bendix Service Centre telephone 08705 929 929

10 001	itact your local into	ity bendix se	TVICE CENTIC TELEPIT	0110 00700	12 / 12 /
M BIRMINGHAM	IIDLANDS 66 Birch Road East	LONDO	N & EAST ANGLIA 11a Gardener Ind. Estate	NORWICH (M52)	2b Trafalgar Street Norwich NR1 3HN
(M18)	Wyrley Road Industrial Estate Witton Birmingham	(M79)	Kent House Lane Beckenham Kent BR3 1QZ	SUNBURY (M63)	Unit 1a The Summit Hanworth Road Hanworth Ind Estate
BOURNE (M44)	Manning Road Ind Estate Pinfold Road	CHELMSFORD (M47)	Hanbury Road Widford Ind. Estate Chelmsford Essex	so	Sunbury on Thames TW16 5D UTH EAST
	Bourne PE10 9HT	COLINDALE	CM12 3AE Unit 14	ASHFORD (M58)	Unit 2 Bridge Road Business
BRIDGNORTH (M72)	68 St. Mary's Street Bridgnorth Shropshire WV16 4DR	(M53)	Capitol Park Capitol Way Colindale London NW9 0EQ		Est. Bridge Road Ashford Kent TN2 1BB
GLOUCESTER (M23)	101 Rycroft Street Gloucester GL1 4NB	ELTHAM (M78)	194 Court Road Mottingham Eltham London SE9 4EW	FLEET (M59)	Unit 1 Redsfield Industrial Estate Church Crookham
HEREFORD (M31)	Unit 3 Bank Buildings Cattle Market	ENFIELD (M49)	284 Alma Road Enfield		Fleet Hampshire GU13 0RD
	Hereford HE4 9HX		London EN3 7BB	HAYWARDS HEATH (M55)	21-25 Bridge Road Haywards Heath Sussex RH16 1UA
HIGHAM FERRERS (M51)	30 High Street Higham Ferrers Northants NN10 8BB	GRAVESEND (M57)	Unit B4, Imperial Business Estate Gravesend Kent	SO BARNSTAPLE	UTH WEST Main Road
ILKESTON (M43)		HARPENDEN (M46)	DA11 0DL Unit 4 Riverside Estate	(M30)	Fremington Barnstaple North Devon EX31 2NT
LEICESTER Unit 7 (M22) Oaks Industrial Estat	Unit 7 Oaks Industrial Estate	(111-10)	Coldharbour Lane Harpenden AL5 4UN	BOURNEMOUTH (M26)	63-65 Curzon Road Bournemouth Dorset BH1 4PW
	Coventry Road Narborough Leicestershire LE0 5GF	LETCHWORTH (M50)	16-17 Woodside Ind. Est. Works Road Letchworth Herts	BRIDGEWATER (M35)	6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT
Clifton Street	Stonefield Park	LONDON (M76)	SG6 1LA 2/4 Royal Lane Yiewsley	BRISTOL (M25)	11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
	LN5 8AA	, ,	West Drayton Middlesex	EMSWORTH	266 Main Road
NEWCASTLE UNDER LYME (M12)	18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire	MAIDENHEAD (M60)	UB7 8DL Reform Road Maidenhead	(M33)	Southbourne Emsworth PO10 8JL
DEDDITOU	ST5 0TW		Berkshire SL6 8BY	ISLE OF WIGHT (M34)	Unit 8 Enterprise Court
REDDITCH (M20)	13 Thornhill Road North Moons Moat Redditch Worcestershire	MOLESEY (M61)	10 Island Farm Avenue West Molesey Surrey		Ryde Business Park Ryde Isle of Wight PO33 1DB
TAMWORTH	Unit 3	NEWBURY	9 Pipers Court	NEWTON ABBOT (M29)	Unit 2 Zealley Ind. Estate Kingsteignton
(M19)	Sterling Park Claymore Tamworth	(M24)	Berkshire Drive Thatcham Berkshire		Newton Abbot S. Devon TQ12 3TD
WORCESTER (M73)	Units 1 & 2 IP Northbrook Close (N	IPSWICH (M48)	Unit 6C Elton Park Business	REDRUTH (M36)	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW
	Gregorys Mill Ind Estate Worcester WR3 8BP		Centre Hadleigh Road Ipswich IP2 0DD		

MAINTENANCE AND CLEANING



Disconnect the appliance from the electricity supply before carrying out any maintenance or cleaning.

> Never use abrasive cleaning products or cleaning agents which contain bleach, acetone, alcohol or methylated spirits.

External Cleaning

Periodically wipe the outside of the appliance, using only water and a soft cloth. Dry thoroughly.

Cleaning the Lint Filter

Your dryer will only function well if the filter is clean.


The filter collects fluff which accumulates during drying and it must therefore be removed and cleaned at the end of each programme.

To remove the filter:

- Pull the filter upwards and away from the
- · Remove any threads of fluff by hand or with a soft brush
- Slide the filter back into position.



Wash the filter occasionally in detergent solution using a soft brush to remove any small particles.

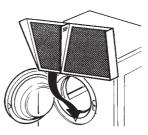



The lint filter must be cleaned after every drying cycle.



** Keep the air inlets at the front and back of the appliance clear.



Cleaning the Door

Wipe the interior part of the door to remove any

The condenser and ducting should be cleaned 3 or 4 times a year or more frequently if the dryer is in



The condenser will discolour through use. This will not affect the performance of the appliance.

For maximum efficiency, the plates are made from very thin aluminium and are easily damaged. Do not try to poke anything between the plates or use a hard object or toll for cleaning. At all times, handle the condenser carefully and avoid crushing the plates.

SOMETHING NOT WORKING

Before contacting your local Tricity Bendix Service Force please carry out the following checks.

SYMPTOM	SOLUTION
◆ The machine does not work	 ♦ Check that there is a supply of electricity ♦ Check the plug fuse ♦ Check the door is closed ♦ Check the machine is switched on ♦ Check the time selector dial is set correctly
◆ The clothes are not dry after normal drying time	 ♦ Check you have used the correct temperature setting) ♦ Check the timer has not been set within a cool down period ♦ The heater cut-out has operated. See below

8


Heater Cut-Out

This cut-out operates if the airflow is severely restricted. Before resetting it check:

- ♦ The filter is clean.
- ♦ The air inlets at the back are not blocked.
- ♦ There are no other restrictions.

Reset the cut-out on the rear of the dryer by pushing the red button.

If the cut-out continues to operate after checking the above points you should contact Tricity Bendix Service Force.

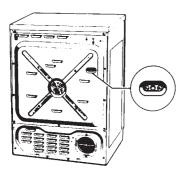

SERVICE AND SPARE PARTS



In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Tricity Bendix Service Force Centre by telephoning:

0870 5 929929 (UK) 0752 01 409 0770 (EIRE)

Your telephone call will be automatically transferred to your local Service Centre. The addresses can be found on the pages headed Tricity Bendix Service Force Centres.

When you contact Service Force, they will need to know:

- 1. Your name, address and post code
- 2. Your telephone number
- 3. Clear and concise details of the fault
- 4. The model and serial number
- The date of purchase

Before calling out an engineer, please ensure you have read the details under the heading 'Something Not Working'.

In-guarantee customers should ensure that the checks under the heading 'Something Not Working' have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

All enquiries concerning service should be addressed to your local Service Centre.

CUSTOMER CARE

For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products please contact our Customer Care Department by letter or telephone:

9

(UK) Customer Care Department

Tricity Bendix

55-77 High Street

Slough

Berkshire

SL1 1DZ

Tel: 08705 950 950*

(EIRE) Customer Care Department

Tricity Bendix

Electrolux Group

Longmile Road

Junction Naas Road

Dublin 12

Tel: 0752 01 409 0752

^{*} calls to this number may be recorded for training purposes.

CONTENTS

FOR THE USER	Page
Important Safety Information Installation Child Safety During Use Service	1
Description of the Appliance Temperature Button Time Selector Dial Programme Chart	3
Programme Chart	4
Hints & Tips on Drying	5
Operating Sequence Loading the Laundry Selecting the programme When drying is complete Maintenance and Cleaning External Cleaning Cleaning the Lint Filter Cleaning the Door	
Something Not Working Symptoms and Solutions	8
Service and Spare Parts	9
Customer Care	9
Tricity Bendix Service Centre Addresses	10 - 11
Guarantee Conditions	12

FOR THE INSTALLER	Page
Installation Instructions Technical Information Positioning Site Preparation	13
Electrical Connection	14
Additional Door reversal	15

ADDITIONAL

Door Reversal

Your dryer has a reversible door. To change the direction of the opening. Proceed as follows:

- (Fig 1) Open the door
 - Undo screw (A)
 - Remove switch strike (B) and replace screw
 - Remove hinge block screws (E)
 - Remove door from hinge blocks
- (Fig 2) Remove hinge screws (F) and hinge (G)
 - Refit to the opposite side as shown
- (Fig 3) Refit latch plate (D) and screws (C)
 - Remove screw (H) at top of door and refit switch strike (B) as shown
 - Fit door to hinge blocks and secure with screws (E)




Fig. 1



Fig 2




Fig. 3

2





Tricity Bendix, 55-77 High Street, Slough, Berkshire SL1 1DZ

Consumer care telephone number... 08705 950 950 (UK) 0752 01 409 0770 (EIRE)

OPERATING & INSTALLATION INSTRUCTIONS



BTD 600

MODEL NO. **PNC - 919222112**

 ϵ

PART NO. **4213 094 80671**

© Electrolux Household Appliances Limited 2000

SERVICE FORCE

To contact your local Service Centre telephone 08705 929 929

N	MIDLANDS	LOND	ON & EAST ANGLIA	s	OUTH EAST
BIRMINGHAM	66 Birch Road East Wyrley Trading Estate Witton Braningham B6 7DB	BECKENHAM	11a Gardner Ind. Estate Kent House Lane Beckenham Kent BR3 1QZ	ASHFORD	Unit 2 Bridge Road Business Centre Bridge Road Ashford Kent TN23 1BB
BOURNE	Pinfold Road Bourne PE10 9HT	CHELMSFORD	Hanbury Road Widford Ind. Estate Chelmsford Essex CM12 3AE	FLEET	Unit 1 Redfields Ind. Estate Church Crookham Fleet
BRIDGNORTH	68 St. Mary's Street Bridgnorth Shropshire WV16 4DR	COLINDALE	Unit 14 Capitol Park Capitol Way Colindale	HAYWARDS HEATH	Hampshire GU13 0RD 21-25 Bridge Road Haywards Heath Sussex RH16 1UA
GLOUCESTER	101 Rycroft Street Gloucester GL1 4NB	ELTHAM	London NW9 0EQ 194 Court Road		Sussex Knio IUA
HEREFORD	Units 3 & 4 Bank Buildings Cattle market		Mottingham Eitham London SE9 4EW	TONBRIDGE	Unit 30 Deacon Trading Estate Morley Road
HIGHAM FERRERS	Hareford HE4 9HX	ENFIELD	284 Alma Road Enfield London EN3 7BB		Tonbridge TN9 1RA
HIGHAM FERRERS	30 High Street Higham Ferrers Northants NN10 8PL	GRAVESEND	Unit B4 Imperial Business Estate	S BARNSTAPLE	OUTH WEST
ILKESTON	Unit 2 Furnace Road Ilkeston DE7 5EP		West Mill Gravesend Kent DA11 0DL	BARNSTAFLE	Main Road Fremington Barnstaple North Devon EX31 2NT
LEICESTER	Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire	IPSWICH	Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD	BOURNEMOUTH	63-65 Curzon Road Bournemouth Dorset BH1 4PW
LINCOLN	LE9 5GF Unit 8 Clifton Street Stone Field Park Lincoln	LETCHWORTH	16-17 Woodside Ind. Park Works Road Letchworth Herts SG6 1LA	BRIDGEWATER	6 Herswell Business Park Salmon Parade Bridgwater Somerset TA6 5PY
NEWCASTLE UNDER LYME	LN5 8LQ 18-21 Croft Road Brampton Ind. Estate	LONDON	2 - 4 Royal Lane Yiewsley West Drayton	BRISTOL	11 Eldon Way Eldonwall Trading Estate Bristol BS4 3QQ
ONDER ETME	Newcastle under Lyme Staffordshire ST5 0TW	MAIDENIUEAD	Middlesex UB7 8DL	EMSWORTH	266 Main Road Southbourne Emsworth
REDDITCH	13 Thornhill Road North Moons Moat	MAIDENHEAD	Reform Road Maidenhead Berkshire SL6 8BY	ISLE OF WIGHT	PO10 8JL Unit 8
	Redditch Worcestershire B98 9ND	MOLESEY	10 Island Farm Avenue West Molesey Surrey		Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
TAMWORTH	Unit 3 Sterling Park Claymore Tamworth B77 5DQ	NEWBURY	KT8 2UZ 9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER	NEWTON ABBOT	Unit 2 Zealley Ind. Estate Kingsteignton Newton Abbot TQ12 3TD
WORCESTER	Units 1 & 2 Northbrooks Close Gregorys Mill Ind. Estate Worcester WR3 8BP	NORWICH	2b Trafalgar Street Norwich NR1 3HN	REDRUTH	Unit 7D Pool Ind. Estate Druids Road Redruth Cornwall TR15 3RH
		SUNBURY	Unit 1a The Summit Hanworth Road Sunbury on Thames TW16 5DB		THE STATE OF THE S

SERVICE FORCE

To contact your local Service Force Centre telephone 08705 929 929

CHAN	NEL ISLANDS	ISLE OF LEWIS	ND Macleod	NO.	ORTH EAST
GUERNSEY	Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands GY1 3AD		16 James Street Stornoway Isle of Lewis PA87 2QW	GATESHEAD	Unit 356a Dukesway Court Dukesway
JERSEY	Jersey Electricity Company Haut De L'orme Rue De Haut De L'orme Trinity Jersey	KELSO	2, 6 & 8 Woodmarket Kelso Borders TD5 7AX	GRIMSBY	Gateshead NE11 0BH 15 Hainton Avenue Grimsby N. E. Lincs DN32 9AS
SC	Channel Islands JE3 5FG	ORKNEY	7 King Street Kirkwall Orkney KW15 1JF	HULL	Unit 1 Boulevard Industrial Estate Hull
ABERDEEN	54 Claremont Street Aberdeen AB10 6RA	PERTH	Scottish Hydro Electric Central Warehouse Inveralmond	LEEDS	HU3 4AY 64-66 Cross Gates Road Cross Gates
AUCHTERMUCHTY	33a Burnside Auchtermuchty Fife KY14 7AJ	(OWN SALES) SHETLAND	Perth PH1 3AF 3-4 Carlton Place Lerwick	NEWTON AYCLIFFE	Leeds LS15 7YS
BLANTYRE	Unit 5 Block 2 Auchenraith Ind. Estate	(OWN SALES)	Shetland ZE1 0PW		Northfield Way Aycliffe Industrial Park Newton Aycliffe DL5 6EJ
DUMERIES	Rosendale Way Blantyre G72 0NJ	SHETLAND (OWN SALES)	Bolts Shetland 26 North Road Lerwick Shetland ZE1 0PE	SHEFFIELD	Pennine House Roman Ridge Road
DUMFRIES	93 Irish Street Dumfries DG1 2 PQ	WHALSAY	Leask Electrical Harisdale Symbister, Whalsay	-	Sheffield S9 1GB
DUNOON	7 Hill Street Dunoon Argyll	(OWN SALES)	Shetland ZE2 9AA	=	ORTH WEST
EDINBURGH	PAZ3 7AL Unit 12 Dumbryden Ind. Estate	NOR1	THERN IRELAND Owenmore House	BIRKENHEAD	1 Kelvin Park Dock Road Birkenhead CH41 1LT
	2 Dumbryden Road Edinburgh EH14 2AB	Kilwee Business Park Dummury Belfast BT17 0HD	CARLISLE	Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH	
GLASGOW	Unit 4 Wellington Road Bishopriggs Glasgow G64 2SA		WALES	ISLE OF MAN	South Quay Ind. Estate Douglas Isle of Man IM1 5AT
NVERNESS	Unit 3BI Smithton Ind. Estate Smithton Inverness IV2 7WL	CARDIFF	Unit 4 Guardian Industrial Estate Clydesmuir Road Cardiff CF2 2QS	BOLTON	Unit B Central Industrial Estate St Marks Street Bolton
SLE OF ARRAN	Arran Domestics The Douglas Centre Brodick Isle of Arran KA27 8AJ	CLYWD	Unit 6-7 Coed Parc Abergele Road Rhuddlan Clwyd	PRESTON	BL3 6NR Unit 250 Dawson Place Bamber Bridge
SLE OF BARRA	J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY	DYFED	LL18 5UG Unit 9 St. Clears Business Park	STOCKPORT	Preston Lancashire PR5 8AL Unit 20 Haigh Park
ISLES OF BUTE	Walker Engineering Glenmhor Upper Serpentine Road Rothesay		Tenby Road St. Clears Carmarthen SA33 4JW	STOCKFORT	Haigh Avenue Stockport SK4 1QR
	Isle of Bute PA20 9FH	OSWESTRY	Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP		